



**TRIANGLE
RESEARCH
INTERNATIONAL**

Smart TILE Fx

**Core Controller for
Ladder+BASIC
Super PLCs**

=

Revision 0

**DESIGN
GUIDE**

Copyright Notice and Disclaimer

All rights reserved. With the exception of legitimate TRi PLC users, who may print or make copies of this manual for reference purposes, no parts of this manual may be reproduced in any form without the express written permission of TRi.

Triangle Research International, Inc. (TRi) makes no representations or warranties with respect to the contents hereof. In addition, information contained herein are subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, TRi assumes no responsibility for errors or omissions or any damages resulting from the use of the information contained in this publication.

Windows is a trademark of Microsoft Inc.
 MODBUS is a trademark of Modbus.org
 All other trademarks belong to their respective owners.

Revision Sheet

Release No.	Date	Revision Description
Rev. 0	2/26/2014	First Release

Conditions of Sale and Product Warranty

Triangle Research International Inc. (TRi) and the Buyer agree to the following terms and conditions of Sale and Purchase:

1. The SmartTILE Control boards are guaranteed against defects in materials or workmanship for a period of one year from the date of registered purchase. Any unit which is found to be defective will, at the discretion of TRi, be repaired or replaced.
2. TRi will not be responsible for the repair or replacement of any unit damaged by user modification, negligence, abuse, improper installation, or mishandling.
3. TRi is not responsible to the Buyer for any loss or claim of special or consequential damages arising from the use of the product. The product is not a fail safe device and must **NOT** be used in applications where failure of the product could lead to physical harm or loss of human life. Buyer is responsible to conduct their own tests to meet the safety regulation of their respective industry.
4. Products distributed, but not manufactured by TRi, carry the full original manufacturers warranty. Such products include, but are not limited to: power supplies, sensors, I/O modules and battery backed RAM.
5. TRi reserves the right to alter any feature or specification at any time.

Notes to Buyer: If you disagree with any of the above terms or conditions you should promptly return the unit to the manufacturer or distributor within 30 days from date of purchase for a full refund.

TABLE OF CONTENTS

		<u>Page #</u>
1	Introduction to the SmartTILE Controller Board	1-1
1.1	Overview	1-1
2	Physical Dimensions, Mounting, & Wiring Interface	2-1
2.1	SmartTILE Dimensions:	2-1
2.2	SmartTILE Mounting:	2-4
2.3	SmartTILE Wiring Interface	2-5
2.4	Full Pinout	2-8
3	Power Supply	3-1
3.1	Low Voltage Reset.....	3-2
3.2	Supply Smoothing and Protection.....	3-2
3.3	Power Failure Interrupt Circuit.....	3-3
4	Digital I/O Circuits	4-1
4.1	Digital Input Circuits.....	4-1
4.2	Digital Output Circuits.....	4-2
4.2.1	Electrical Specifications:.....	4-2
4.2.2	Digital Output Wiring Diagram.....	4-3
4.2.3	Inductive Load	4-4
4.3	Digital I/O Expansion.....	4-5
5	Analog Inputs and Outputs	5-1
5.1	Analog Power Supply.....	5-1
5.2	Analog Inputs	5-2
5.2.1	A/D #1 to 8 Buffered Circuit Design Examples	5-2
5.2.2	A/D #1 to 8 Direct Connection.....	5-3
5.3	Analog Outputs.....	5-4
6	LCD Display Port	6-1
6.1	Programming The LCD Display.....	6-2
7	Program and Data Memory	7-1
7.1	Program Memory	7-1
7.2	Non Volatile FRAM Memory.....	7-1
7.3	Volatile Data Memory	7-1
8	DIP SWITCHES	8-1
8.1	Usefulness of SW1-1	8-1

8.2	Usefulness of SW1-3	8-1
8.3	Usefulness of SW1-4	8-2
9	Real Time Clock Battery	9-1
10	CPU Status Indicators	10-1
10.1	RTC Error (Green LED)	10-1
10.2	Pause (Red LED).....	10-1
10.3	Run Error (Red LED).....	10-1
11	Communication Port Circuit Design	11-1
11.1	COMM1.....	11-1
11.2	COMM 2.....	11-1
11.3	COMM 3.....	11-2
11.4	Circuit Design Examples	11-2
12	IR Sensor Circuit Design	12-1
13	I2C Circuit Design	13-1
14	Ethernet Port	14-1
15	Special Digital I/Os	15-1
15.1	High Speed Counters	15-2
15.1.1	Interfacing to 5V type Quadrature Encoder	15-2
15.2	Frequency / Speed measurement	15-3
15.2.1	Interfacing to 5V type Quadrature Encoder	15-3
	SmartTILE	1
15.3	Interrupts	15-4
15.3.1	Input Interrupts	15-4
15.3.2	Periodic Timer Interrupt (PTI).....	15-4
15.3.3	Power Failure Interrupt (PFI)	15-4
15.4	Stepper motor control.....	15-4
15.4.1	Technical Specifications:	15-4
15.4.2	Stepper Motor Driver.....	15-5
15.5	pulse width modulated outputs	15-5
15.5.1	Introduction	15-5

Thank you for your interest in SmartTILE Development Kit.

The full content of this design guide is available only to the buyers of the SmartTILE Development Bundle.